





## I. USAGE

### a. Arming The System

- Enter the password (4 digits, default password is 1111) and press "OK". A long warning tone will be heard and alarm will be armed in 8 seconds. Close the door. The alarm can be armed by pressing remote controller's  button.

**NOTE:** If you press OK button 2 times after entering the password, or if you press  after pressing  button, shock sensor will be temporarily cancelled.


### b. Disarming The System

- Open the door, enter the password and press "OK". 4 short warning tones will be heard and system will be disarmed. The alarm can be disarmed by pressing remote controller's  button as well.



## II. SETTINGS

### a. Remote Controller Enrollment

- Enter the password and press "OK". A long warning tone will be heard.
  - Press 1,2,3,4 and "OK" respectively. A long and a short warning tone will be heard.
  - Press 1. Two long warning tones will be heard.
  - Press  button of remote controllers till you hear 4 short warning beeps.
- The system can learn up to 6 remote controllers.

### b. Disabling / Enabling The Delay Time

While the alarm system is active, if the door is opened, it waits 8 seconds for entering the password. If the system is used with remote controller only, this delay can be disabled. Follow the instruction below to disable this delay:

- Enter the password and press "OK". A long warning tone will be heard.
- Press 1,2,3,4 and "OK" respectively. A long and a short warning tone will be heard.
- Press 2. Two long warning tones will be heard. Enter the password and press "OK".

If you want to enable it, follow the instructions below:

- Enter the password and press "OK". A long warning tone will be heard.
- Press 1,2,3,4 and "OK" respectively. A long and a short warning tone will be heard.
- Press 3. Two long warning tones will be heard. Enter the password and press "OK".

### c. Shock Sensor Sensitivity Adjustment

- Enter the password and press "OK". A long warning tone will be heard.
- Press 1,2,3,4 and "OK" respectively. A long and a short warning tone will be heard.
- Press 4. Two long warning tones will be heard.
- Press 1 for the most sensitive, press 2 for sensitive, press 3 for rough, press 4 for the most rough. Enter the password and press "OK".

### d. Changing The Password

- Enter the password and press "OK". A long warning tone will be heard.
- Press 1,2,3,4 and "OK" respectively. A long and a short warning tone will be heard.
- Press 5. A short warning tone will be heard.
- Enter new password (4 digits) and press "OK". A short warning tone will be heard.
- Enter new password again and press "OK". A short and two long warning tones will be heard and password will be changed. "1234" cannot be used as a password.

## III. SIREN AND WARNINGS

### a. Triggering The Siren

If the door is opened while the system is active, it will wait 8 seconds for entering the password and if the right password is not entered (or the system is not deactivated by remote controller) the alarm siren will be triggered.

After the siren is triggered, even if the door is closed, alarm will continue for 3 minutes. After 3 minutes, if the door is still closed, siren will be off. If the door is left open, siren will continue for 15 minutes.

Besides the opening of the door, if there is a shock/hit on the door, it will trigger the siren immediately.

### b. Low Battery Warning

If you hear 3 short warning tones everytime you activate the system, the batteries need to be changed. The system uses 2x AA size batteries. To replace them:

- Uninstall the device from the door.
- Open the battery cover by unscrewing 2 screws.
- Change the batteries. Tighten the battery cover and re-install it to the door.

Use AA size 1,5 V Alkaline or Lithium high quality batteries only.

## IV. INSTALLATION

The system is installed to the door like a mortise lock. To install the system, there should be a suitable mortise in the door.

The magnet should be attached to the frame of the door. When the door is closed, magnet should be face to face with the gap between 2 and 3 buttons

## V. FACTORY RESET

If the password is forgotten or any of remote controller is lost, the system can be reset to factory settings. To do this:

- Uninstall the device from the door.
- Open the battery cover by unscrewing 2 screws and remove 1 battery.
- Put the device to the frame of the door as the magnet corresponds to the gap between 2 and 3 buttons and re-install the battery.
- In 5 seconds, press 1,2,3,4 and OK respectively.

After a long warning tone, all the remote controllers enrolled to the system will be deleted and the password will be reset to "1111".

## MANUFACTURER